UltraShade

A.B.N. 77 010 472 563 56 Zillmere Rd, Boondall QLD 4034 P.O. Box 856, Virginia QLD 4014

Tel: (07) 3265 7288

Em: info@ultrashade.com.au



HOME & CAFÉ UMBRELLA

Frame Specifications: INFORMATION SHEET

Pole Height: 2.75m - 3.0m (Size Dependant)

Post Diameter: 60mm x 2mm or 50mm x 4mm or 40mm x 3 mm Arm Section: 19 x 19 x 1.6mm Reinforced with 15 x 15 x 1.6mm

Opening Mechanism: Marine Grade Rope & Pulley **Materials:** Aluminium, Stainless Steel and Nylon

Finish: Dulux Powder Coating

Standard Frame Colours: White, Beige, Green, White Birch, Black, Charcoal, Silver, Primrose, Claret, Navy

Custom Colours: On Request

Octagonal



2.5m Octagonal (4.8 sq/m)

3.0m Octagonal (6.5 sq/m)

3.5m Octagonal (8.73 sq/m)

4.0m Octagonal (11.5sq/m)

4.3m Octagonal (13.12 sq/m)

Square



2.0m Square (4.0 sq/m)

2.5m Square (6.25 sq/m)

2.8m Square (7.85 sq/m)

3.0m Square (9.0 sq/m)

Available Bases:

Bolt Down or **In-ground** or **Mobile**

100% Acrylic Outdoor Awning Fabric

Large Colour Selection

Over 17 Options

100% UV Blockout

UV Reflective

Water Resistant

Mould & Mildew Resistant

Fade Resistant






Home & Cafe® Octagonal Umbrella Dimensions

Size	A	В	С	D	E	F	G	Н
2.5 m	2000	2550	2500	2200	950	2550	1250	400
3.0 m	2050	2550	2950	2700	1100	2550	1000	400
3.5 m	2200	2750	3500	3200	1300	2750	970	400
4.0 m	2200	2800	3950	3550	1500	2800	750	450
4.3 m	2150	2800	4300	3900	1620	2800	600	450

NB: All measurements in millimeters.

To be used as a guide only, all measurements are approximate

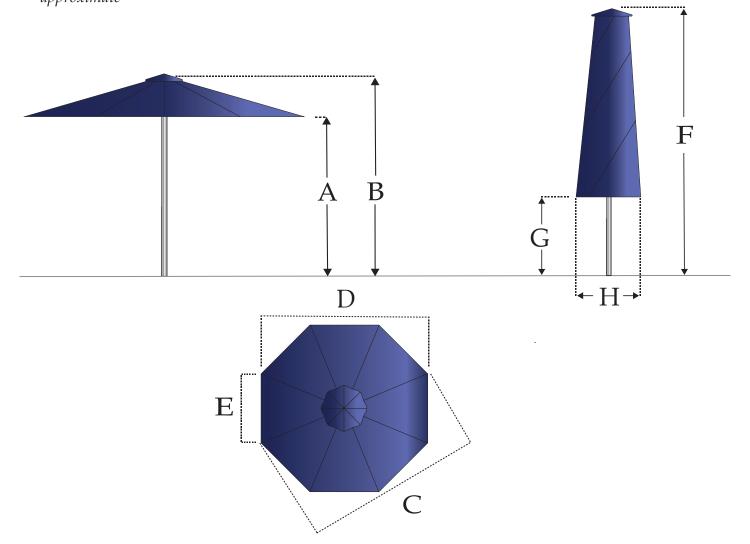



Home & Cafe® Square Umbrella Dimensions

Size	A	В	C	D	E	F	G	Н
2.0 m	2100	2550	2000	2850	1000	2550	1000	400
2.5 m	2150	2700	2500	3500	1250	2700	800	400
2.8 m	2150	2800	2800	3950	1400	2800	750	450
3.0 m	2200	2800	3000	4250	1500	2800	600	450

NB: All measurements in millimeters.

To be used as a guide only, all measurements are approximate F В ← H →

A.B.N. 77 010 472 563 56 Zillmere Rd, Boondall QLD 4034 P.O. Box 856, Virginia QLD 4014 Tel: (07) 3265 7288 Fax: (07) 3265 7304 Em: info@ultrashade.com.au

Home and Cafe Umbrella Installation Instructions

Bolt Down Base:

Bolt down bases are supplied in two parts: a) Top Half - Spigot b) Bottom Half - Base Plate

- 1. Bolt the spigot to the base plate using the 3/8 x 3/4 bolts and spring washers that are supplied.
- Bolt base plate to the concrete pad using M12 Dyna Bolts
 or Bolt base plate to timber decking using M12 bolts for timber. Timber decks need to be reinforced
 between the joists with hardwood, drill through reinforcing timber and deck board with M12 Drill.
- 3. Base must be level so that the spigot is plumb. Recommend using M12 Flat washers under the bolt holes to pack up to required height
- 4. Stand umbrella on the spigot. Open Umbrella & rotate to desired position to align.
- 5. Tighten grub screw with allen key supplied.
- 6. Fit Nylon Buffers to Umbrella arms as per for ease of opening.

In-ground Installations

Inground bases are supplied in two parts: a) Top Half - Spigot b) Bottom Half - Inground Base

- 1. Bolt spigot to in-ground base using the 3/8 x 3/4 bolts and spring washers supplied.
- 2. Dig a hole for the concrete measuring approx. 300mm dia. x 500mm deep. (Can vary depending on soil grade.)
- 3. The underside of the base flange should be at least 12mm above finished ground height or paving level.
- 4. Base must be plumbed so that the spigot is vertical.
- 5. Concrete must be left to set for **3 4 days** before standing the umbrella to ensure strength of concrete.
- 6. Stand umbrella on the spigot. Open Umbrella & turn to desired position.
- 7. Tighten grub screw with allen key supplied

8.

Mobile Base Installations


Mobile Bases are supplied with the following parts: a) Black Base Plate b) Spigot c) (Optional) 20KG Weight Bags x 2 d) Feet (4)


- 1. Attach the feet to the underside of the Stainless steel base. Place base where required.
- 2. Bolt the spigot to the base using the four bolts provided.
- 3. Place Weight bags or other ballast on the base
- 4. Stand umbrella on the spigot Open Umbrella & turn to the desired position.
- 5. Tighten grub screw with allen key supplied.
- 6. Fit Nylon Buffers to Umbrella arms as for ease of opening

Please note:


- Over time the grub screws may loosen, especially in windy conditions.
- We recommend that the grub screw be checked regularly to ensure it is tight.
- Use the Allen Key supplied to ensure it is tight.
- Ensure the 6mm Bolt supplied with the allen key is installed through the post and through the spigot for extra security
- If installing through a table, ensure you use a base.

UltraShade

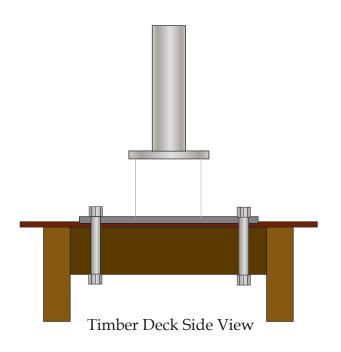


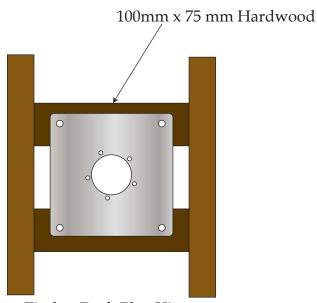

Timber Deck Plan View

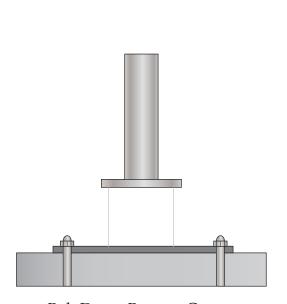

Bolt Down Base on Concrete

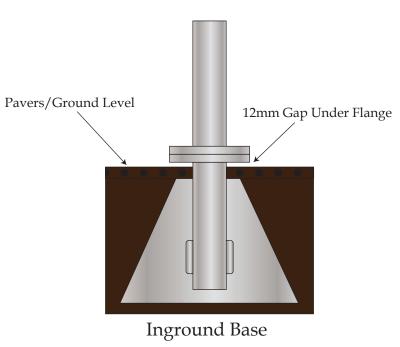

Footing Size:
Approximately 400mm x 600 mm




Home and Cafe Umbrella Locking Bolt Installation Instructions

To ensure the umbrella remains secure and does not turn or lift off the spigot, installation of the locking bolt is required:

Locate the 6mm holes in the umbrella post, 50mm from the bottom of the post. Then use an 6mm drill bit to drill through the umbrella post then through the spigot. Drill through one side of the post, then drill through the opposite side, then pass the drill bit through both holes to ensure a bolt can pass through.

Once the holes have been drilled, secure the umbrella to the spigot by passing the supplied M6 x 70mm Bolt through the drilled holes and secure it with the provided M6 Nut using two 10mm Spanners.

NB: If this precaution is not taken when first installing the umbrella it could cause damage or injury due to turning or lifting off the spigot.

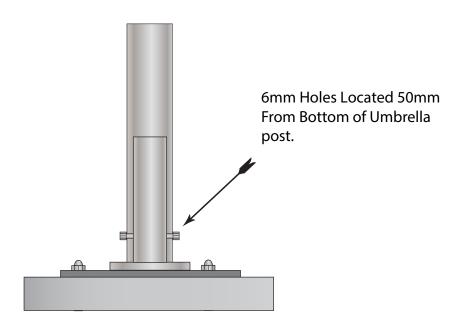



HOME & CAFE UMBRELLA WARRANTY

Aluminum Frames are covered by a 5 Year structural warranty. Warranty specifically excludes damage to the powder coat finish caused by corrosion, scratching, pitting, fading or peeling.

Canopy Fabrics are covered by a 3 Year workmanship warranty and a fade guarantee of up to 10 years from the fabric supplier.

Conditions of Warranty:

- 1. This warranty does not cover any repairs consequent upon accident, alterations or repairs by any other than an authorised dealer/agent of UltraShade, misuse, fire, floods, earthquakes or excessively high wind conditions.
- **2.** This warranty applies to the original purchaser from the purchase date and covers manufacturing faults and defects.
- **3.** This warranty is valid only for installation made by Ultrashade/ Agent/ Dealer/ Yourself/ Tradesman: The installation must be carried out exactly as shown in the UltraShade Installation Instructions and Technical Information.
- **4.** Owner to ascertain position of all underground pipes and electrical wires and notify installer of any obstacles. Although all care will be taken, no responsibility can be accepted for any underground breakages.
- **5.** This warranty is valid only if the canopy has been kept clean and free of dust/debris with regular hosing as this will prolong the life of the canopy.
- **6.** This warranty is only valid if the umbrella is put up and collapsed as detailed in the open/close information.
- **7.** The cost of transportation and insurance both ways for any repair to the UltraShade Umbrella is to be paid by the claimant.
- **8.** Warranty specifically excludes general wear and tear, rusting of steel components and parts, corrosion and damage caused as a result of failure to observe reasonable care, maintenance and assembly instructions.
- **9.** UltraShade reserves the right to determine whether or not fault is caused by faulty workmanship or material or any other part is defective.
- **10.** UltraShade may offer advice but accepts no responsibility to the suitability of the ultimate position of the UltraShade Umbrellas.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.